

MODEL: SDVOM

INSTRUCTIONS FOR EXPLOITATION

THE INSTALLATION SHOULD BE PERFORMED BY A QUALIFIED ELECTRICIAN ACCORDING TO THIS MANUAL. PLEASE, KEEP THE INSTRUCTIONS.

PRODUCT CHARACTERISTICS

- Detection Range:360°
- Power supply: 220-240 V AC/50-60 Hz
- Max rated load:800 W (incandescent lamps)
.....400 W (energy saving lamps)
- Detection distance:max. 3 m
- Installation height: 2.2 - 4 m
- Working temperature range:.....-20° C ~ +40° C
- Time delay:min. 10 sec±3 sec. (adjustable)
..... max. 30 min±2 min.
- Ambient light:..... <3-2000 lx (adjustable)
- Index of protection:..... IP20
- Power consumption:..... 0.5 W
- Working humidity:..... < 93% RH
- Detection moving speed: 0.6 – 1.5 m/s
- Mounting hole:ø60mm


NOTES AND INFORMATION

The motion sensor is a passive infrared sensor, which detects (monitors) infrared rays (warmth) emitted by the objects that fall into its detection range. The sensor turns on / off the load, connected to it, depending on the change of the thermal background in the detection area. This is why it is not recommended to install the motion sensor in areas with great temperature amplitude – near air conditioners or heaters.

SAFETY INSTRUCTIONS


Any action performed when the main power supply is on has a risk of electrical shock. The power supply must be turned off prior to installation. The max. load should not be exceeded. It is not recommended to use the sensor to control luminescent lamps.

INSTALLATION: BUILDING-IN

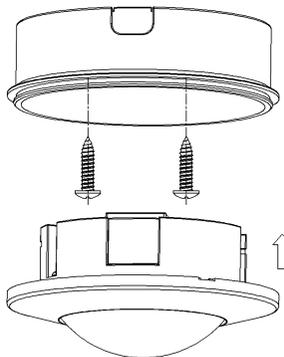


1. Turn off the main power supply and open the transparent plastic cover at the bottom of the sensor.
2. Remove the metal springs from the sensor
3. Fix the plastic back cover to the installation surface
4. Loosen the screws of the connecting terminal block and connect the power supply and load, according to the scheme below.
5. Tighten the screws and put the transparent cover back.
6. Install the sensor to the plastic back cover.
7. After installation, turn on the power supply and test the sensor.

WIRE CONNECTION DIAGRAM

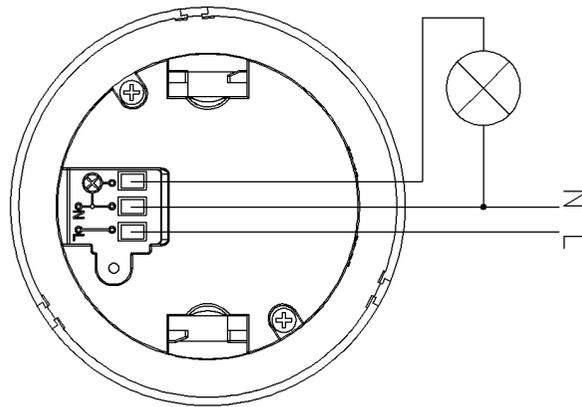

INSTALLATION: BUILDING-IN

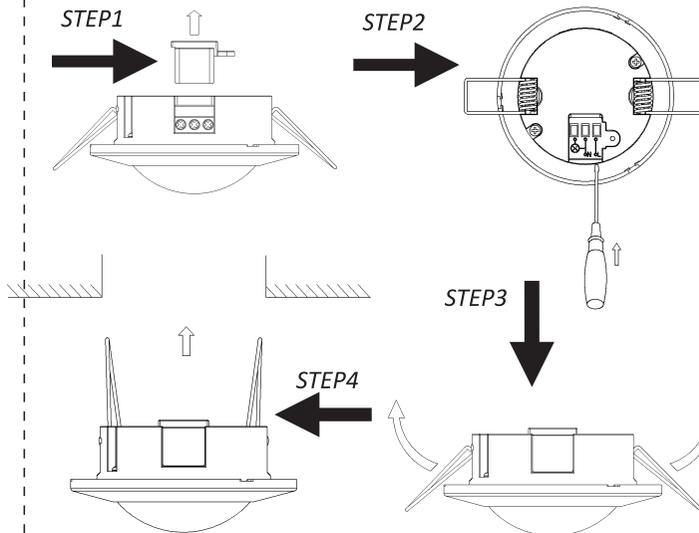

1. Turn off the main power supply and open the transparent plastic cover at the bottom of the sensor.
2. Loosen the screws of the connecting terminal block and connect the power supply and load, according to the scheme below.
3. Tighten the screws and put the transparent cover back.
4. Fold the metal spring of the sensor upwards, until they are in "1" position with sensor, and then put the sensor into the hole or installation box which is on the ceiling and has the similar size with the sensor. Releasing the spring, the sensor will be set in this installation position.
5. After installation, turn on the power supply and test the sensor.

TESTING THE SENSOR

- Before switching the main power supply on, turn the TIME knob anticlockwise to "minus" and the LUX knob clockwise to the symbol "sun".
- Turn on the power supply and the lights will immediately turn on. 10 seconds ± 3 sec. later, the lights will turn off automatically. If the sensor detects a moving object, it will work again normally.
- If a movement is detected in the controlled area, the sensor will turn on the load. If a movement is detected again during the time delay, the time will be recalculated based on the initial settings.
- To test the sensor sensitivity to ambient light, turn LUX knob anticlockwise to the symbol "3". If the ambient light is more than 3lx, the sensor will turn off the load, even if there is a movement in the detection area. If the ambient light is less 3lx, the sensor will turn on the load, once detecting a moving object.

POSSIBLE REASONS FOR SENSOR MALFUNCTIONS

The lamp does not switch on:

- Please check if the power and load connection is correct.
- Make sure the lamp is not defective.
- Check if the working light corresponds to the ambient light.
- When testing in daylight, please turn LUX knob to „sun“ position, otherwise the sensor lamp could not work!

The sensitivity is poor:

- Please check if there is hinder in front of the detection window to prevent from receiving the signals.
- Please check if the ambient temperature is too high.
- Please check if the signals source is in the detection area.
- Please check if the installation height corresponds to the height shown in the instruction.

The sensor does not switch off the load automatically:

- Check if there are continual signals in the detection area.
- Make sure TIME knob is not set to "plus".
- Check if the power corresponds to the instruction.
- Make sure there are no heaters in the sensor range.

TAKING CARE OF THE NATURAL ENVIRONMENT CLEANLINESS

The product and its components are not harmful to the environment. Please dispose the package elements separately in containers for the corresponding material.

Please dispose the broken product separately in containers for out of usage electrical equipment.